



Таблица контактов 8/4 блока

10	22	34	46	58	70	82	94	11	23	35	47	59	71	83	95
11	21	33	45	57	69	81	93	12	24	36	48	60	72	84	96
1	8	20	32	44	56	68	80	13	25	37	49	61	73	85	97
2	9	19	31	43	55	67	79	14	26	38	50	62	74	86	98
3	10	28	40	52	64	76	88	15	27	39	51	63	75	87	99
4	11	17	29	41	53	65	77	16	28	40	52	64	76	88	100
5	12	18	30	42	54	66	78	17	29	41	53	65	77	89	101
6	13	16	26	38	50	62	74	18	30	42	54	66	78	90	102
7	14	15	25	37	49	61	73	19	31	43	55	67	79	91	103
8	15	14	24	36	48	60	72	20	32	44	56	68	80	92	104
9	16	13	23	35	47	59	71	21	33	45	57	69	81	93	105
12	17	12	22	34	46	58	70	22	34	46	58	70	82	94	106
13	18	11	21	33	45	57	69	23	35	47	59	71	83	95	107
14	19	10	20	32	44	56	68	24	36	48	60	72	84	96	108
15	20	9	19	31	43	55	67	25	37	49	61	73	85	97	109
16	21	8	18	30	42	54	66	26	38	50	62	74	86	98	110
17	22	7	17	29	41	53	65	27	39	51	63	75	87	99	111
18	23	6	16	28	40	52	64	28	40	52	64	76	88	100	112
19	24	5	15	27	39	51	63	29	41	53	65	77	89	101	113
20	25	4	14	26	38	50	62	30	42	54	66	78	90	102	114
21	26	3	13	25	37	49	61	31	43	55	67	79	91	103	115
22	27	2	12	24	36	48	60	32	44	56	68	80	92	104	116
23	28	1	11	23	35	47	59	33	45	57	69	81	93	105	117
24	29	0	10	22	34	46	58	34	46	58	70	82	94	106	118
25	30	0	9	21	33	45	57	35	47	59	71	83	95	107	119
26	31	0	8	20	32	44	56	36	48	60	72	84	96	108	120
27	32	0	7	19	31	43	55	37	49	61	73	85	97	109	121
28	33	0	6	18	30	42	54	38	50	62	74	86	98	110	122
29	34	0	5	17	29	41	53	39	51	63	75	87	99	111	123
30	35	0	4	16	28	40	52	40	52	64	76	88	100	112	124
31	36	0	3	15	27	39	51	41	53	65	77	89	101	113	125
32	37	0	2	14	26	38	50	42	54	66	78	90	102	114	126
33	38	0	1	13	25	37	49	43	55	67	79	91	103	115	127
34	39	0	0	12	24	36	48	44	56	68	80	92	104	116	128
35	40	0	0	11	23	35	47	45	57	69	81	93	105	117	129
36	41	0	0	10	22	34	46	46	58	70	82	94	106	118	130
37	42	0	0	9	21	33	45	47	59	71	83	95	107	119	131
38	43	0	0	8	20	32	44	48	60	72	84	96	108	120	132
39	44	0	0	7	19	31	43	49	61	73	85	97	109	121	133
40	45	0	0	6	18	30	42	50	62	74	86	98	110	122	134
41	46	0	0	5	17	29	41	51	63	75	87	99	111	123	135
42	47	0	0	4	16	28	40	52	64	76	88	100	112	124	136
43	48	0	0	3	15	27	39	53	65	77	89	101	113	125	137
44	49	0	0	2	14	26	38	54	66	78	90	102	114	126	138
45	50	0	0	1	13	25	37	55	67	79	91	103	115	127	139
46	51	0	0	0	12	24	36	56	68	80	92	104	116	128	140
47	52	0	0	0	11	23	35	57	69	81	93	105	117	129	141
48	53	0	0	0	10	22	34	58	70	82	94	106	118	130	142
49	54	0	0	0	9	21	33	59	71	83	95	107	119	131	143
50	55	0	0	0	8	20	32	60	72	84	96	108	120	132	144

ДВ СВ КВ-ИВ КВ-П КВ-П УКВ Гр ВЧ

Принципиальная электрическая схема радиоприемника "Беларусь-59"